
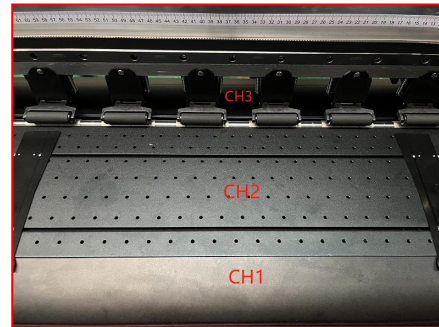


# Operation Panel Function Manual

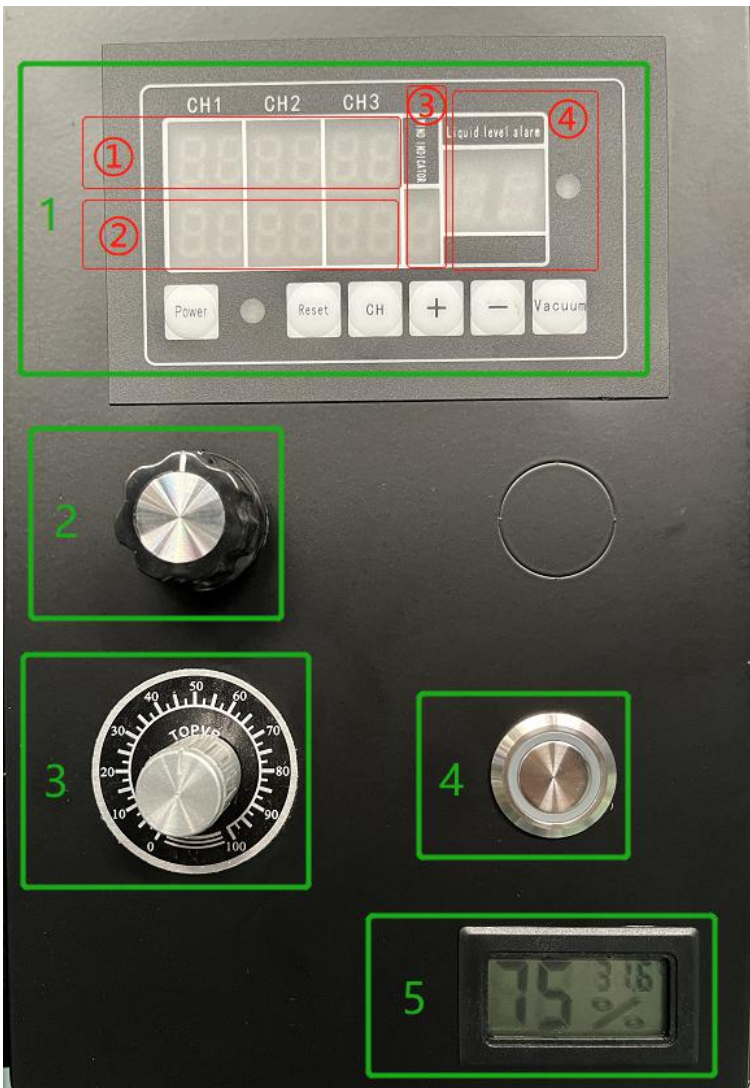


1. Intelligent control panel
  - ① Printer table current temperature.
  - ② Printer table set temperature.
- CH1: Front heater (Set around 50-60°C)
- CH2: Middle heater (Set around 25-30°C)
- CH3: Back heater (Set around 50-60°C)
- Power:: Turn on and off all table heater
- CH : Switch between different heater channel settings
- + - : Set the adjustment table to increase and decrease
- ③: Table vacuum wind size  
(Usually adjusted to about 6-8 gears)
- Vacuum: Adjust the suction size of the table
- ④: Liquid level alarm (idle function)
- Reset: Idle button

## 2. Hot air fan wind adjustment knob


Generally the indoor is not cold not lower than 20°C, turn it counterclockwise to close it.

When the indoor temperature is lower than 20°C, turn the knob clockwise to adjust to the medium gear.

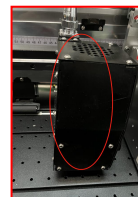

## 3. White ink circulation speed adjustment knob

 Generally, open the knob and keep the adjustment in the medium 50 gear.



## 4. Printer lighting LED switch

## 5. Temperature and humidity meter

The best temperature for indoor work: 20°C-28°C

The best humidity for indoor work: 50%-70%