


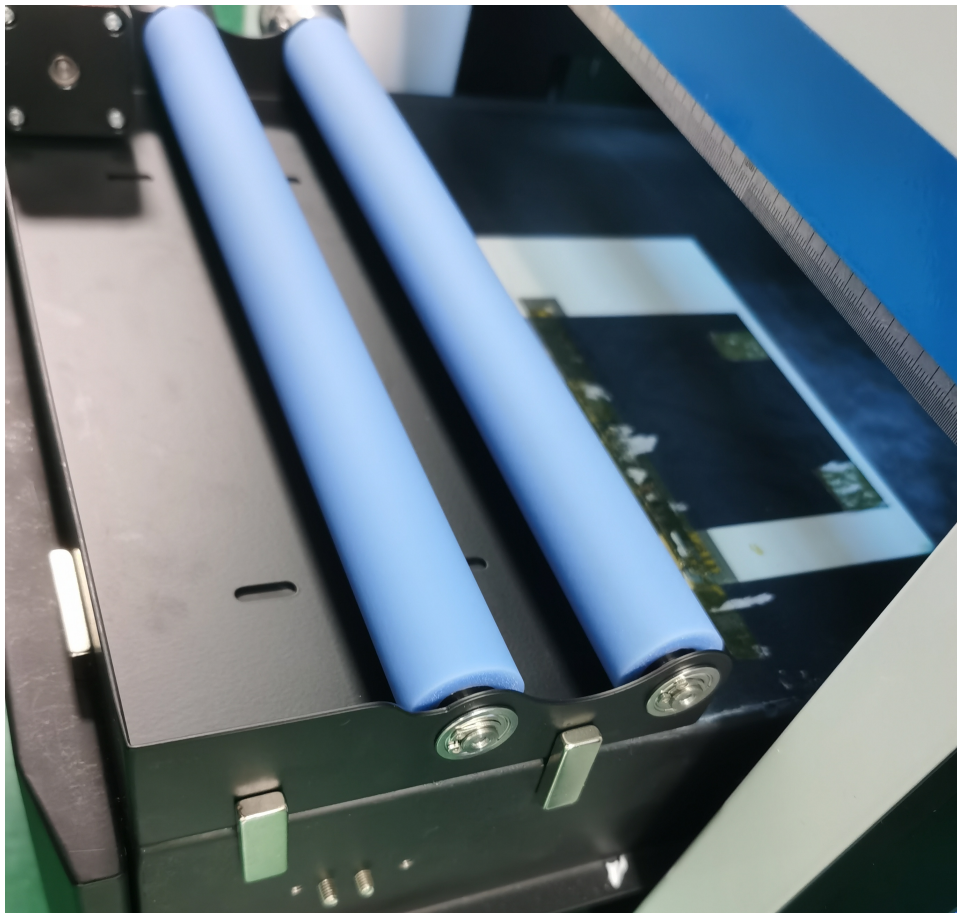


1. Place the cylindrical jig on the platform and fix it with magnets

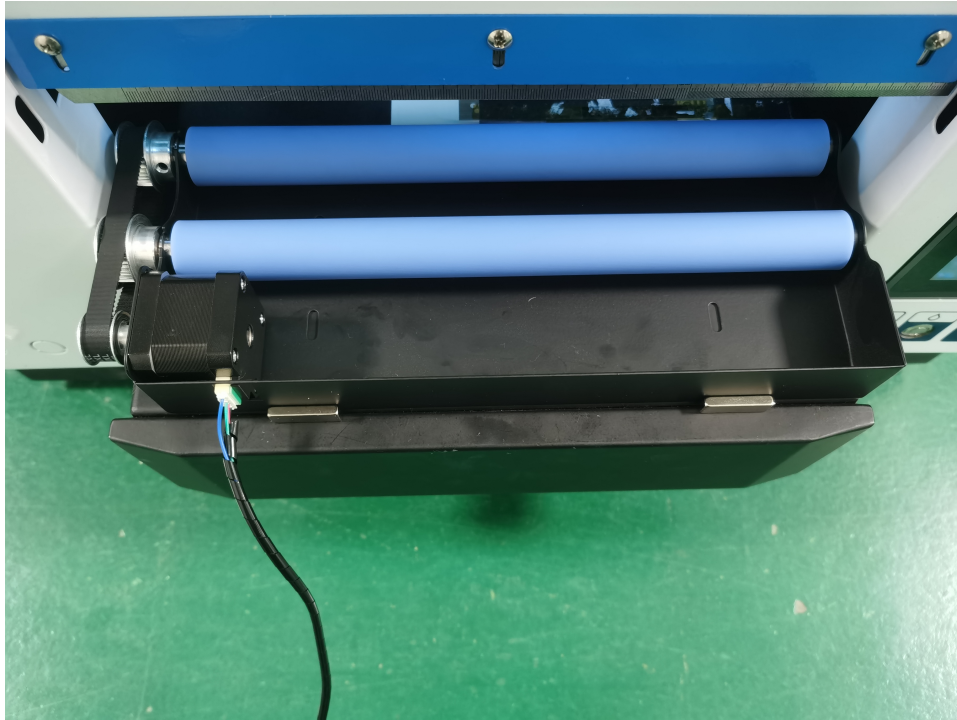



2. Place the bottle, click "Online", and wait for the platform to automatically adjust the printing height.

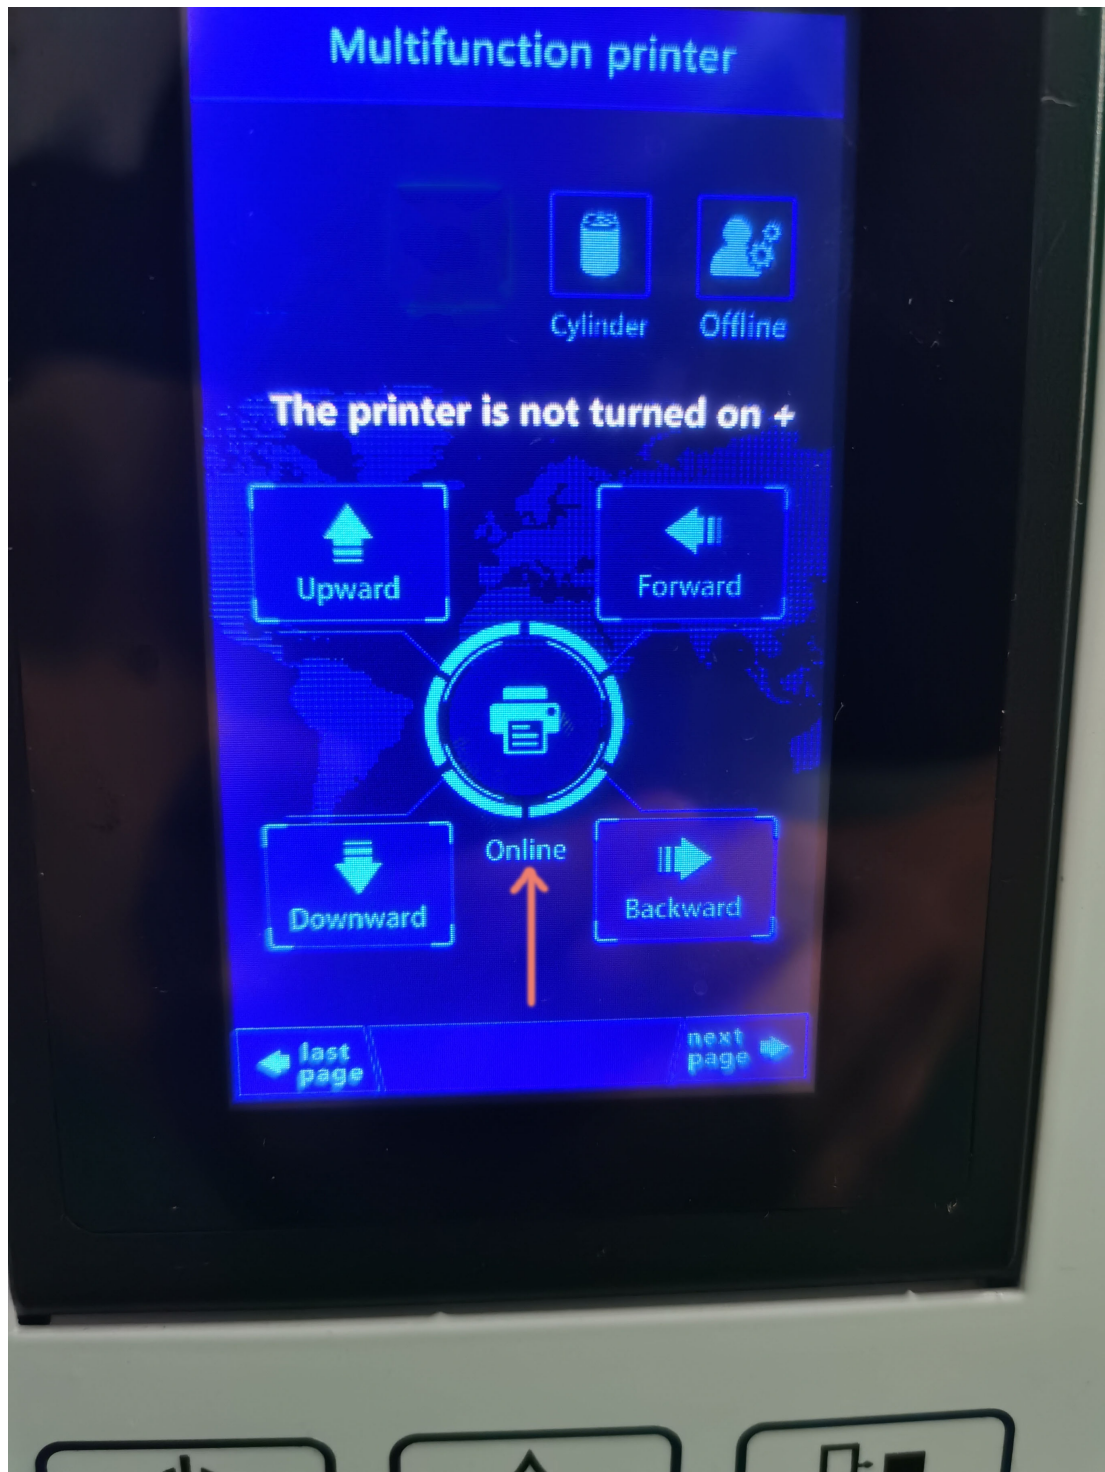

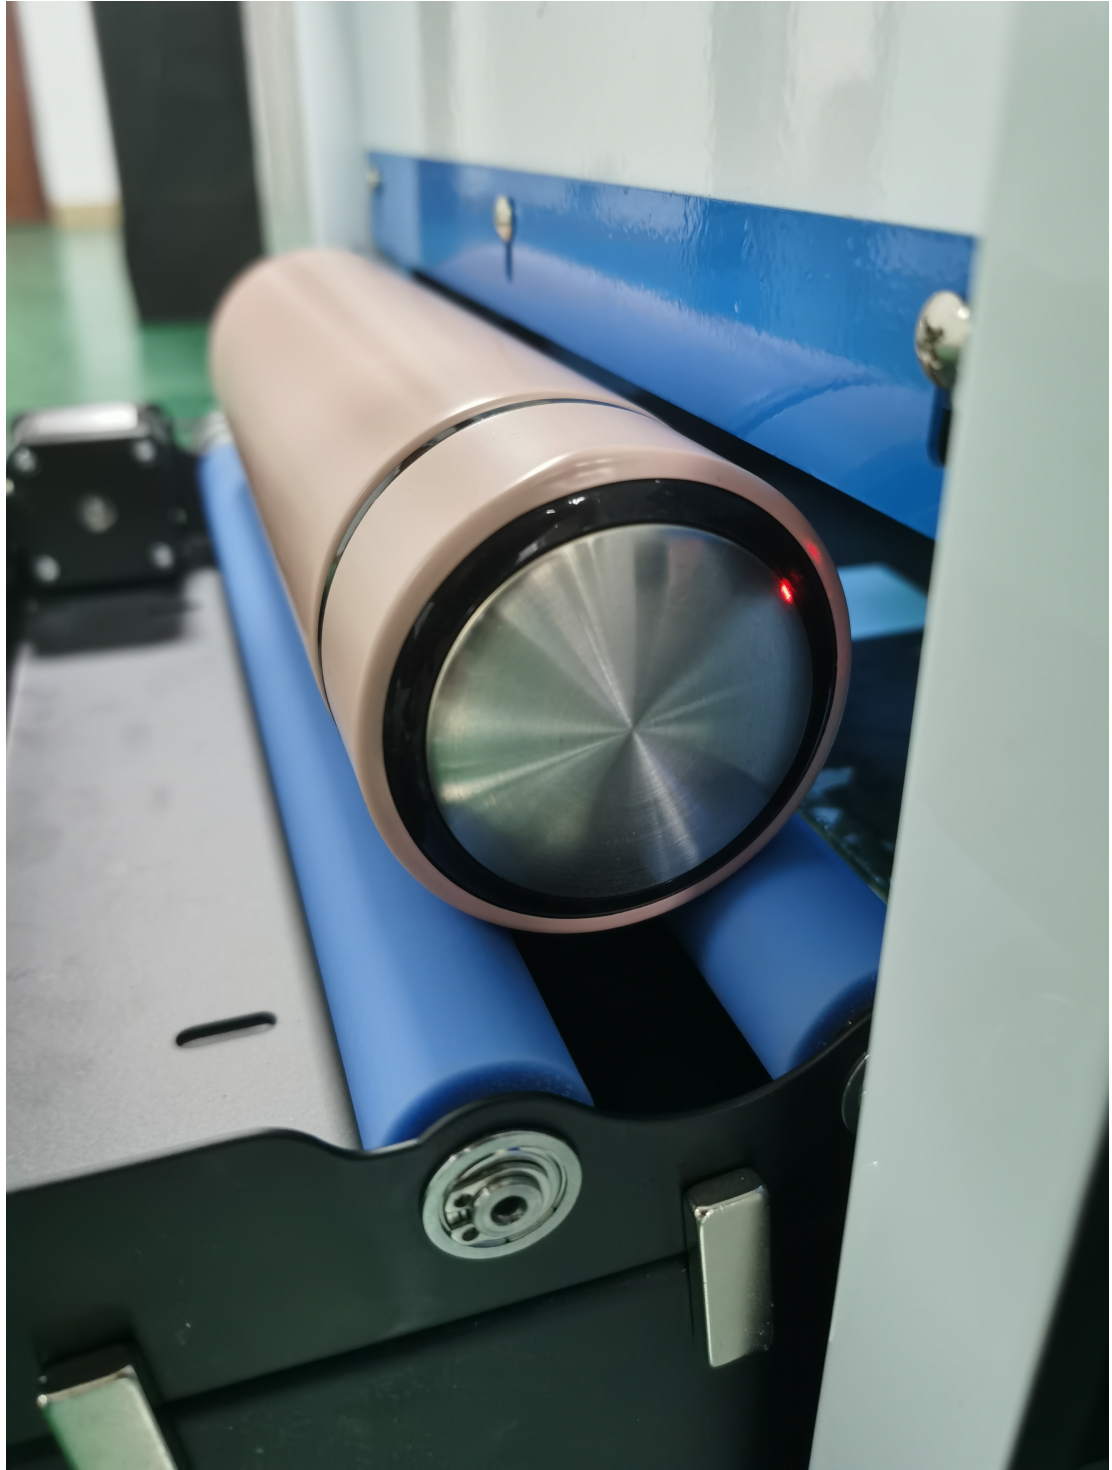

3. Disconnect the cable and connect it to the cylindrical fixture.

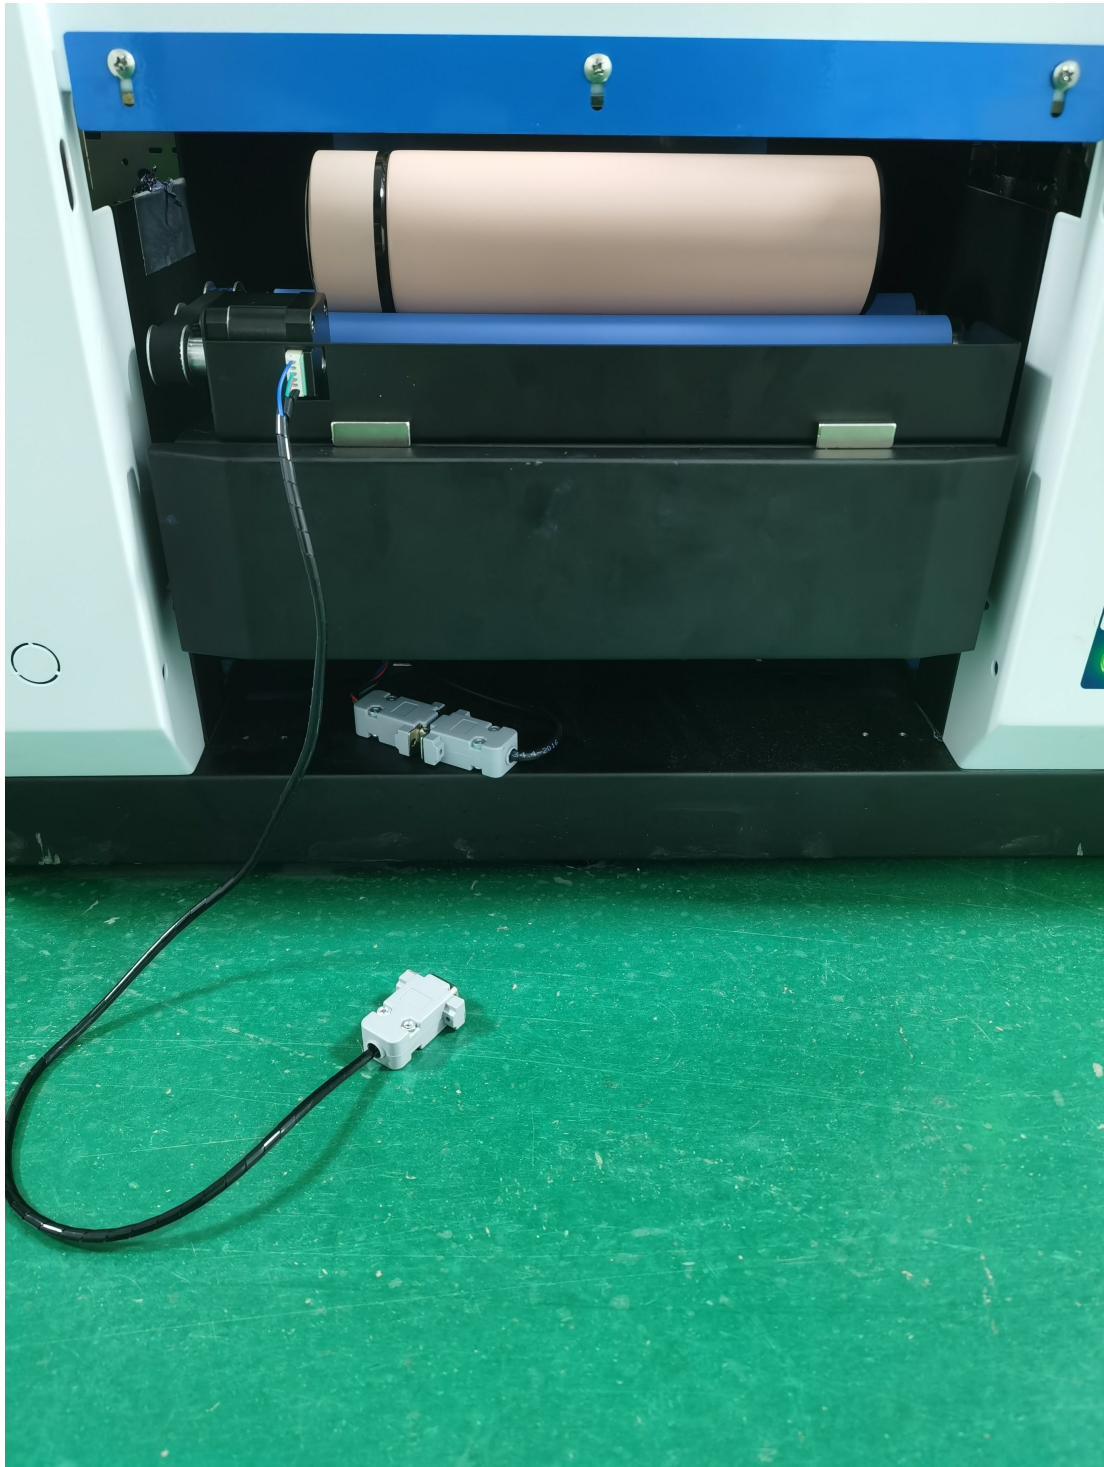

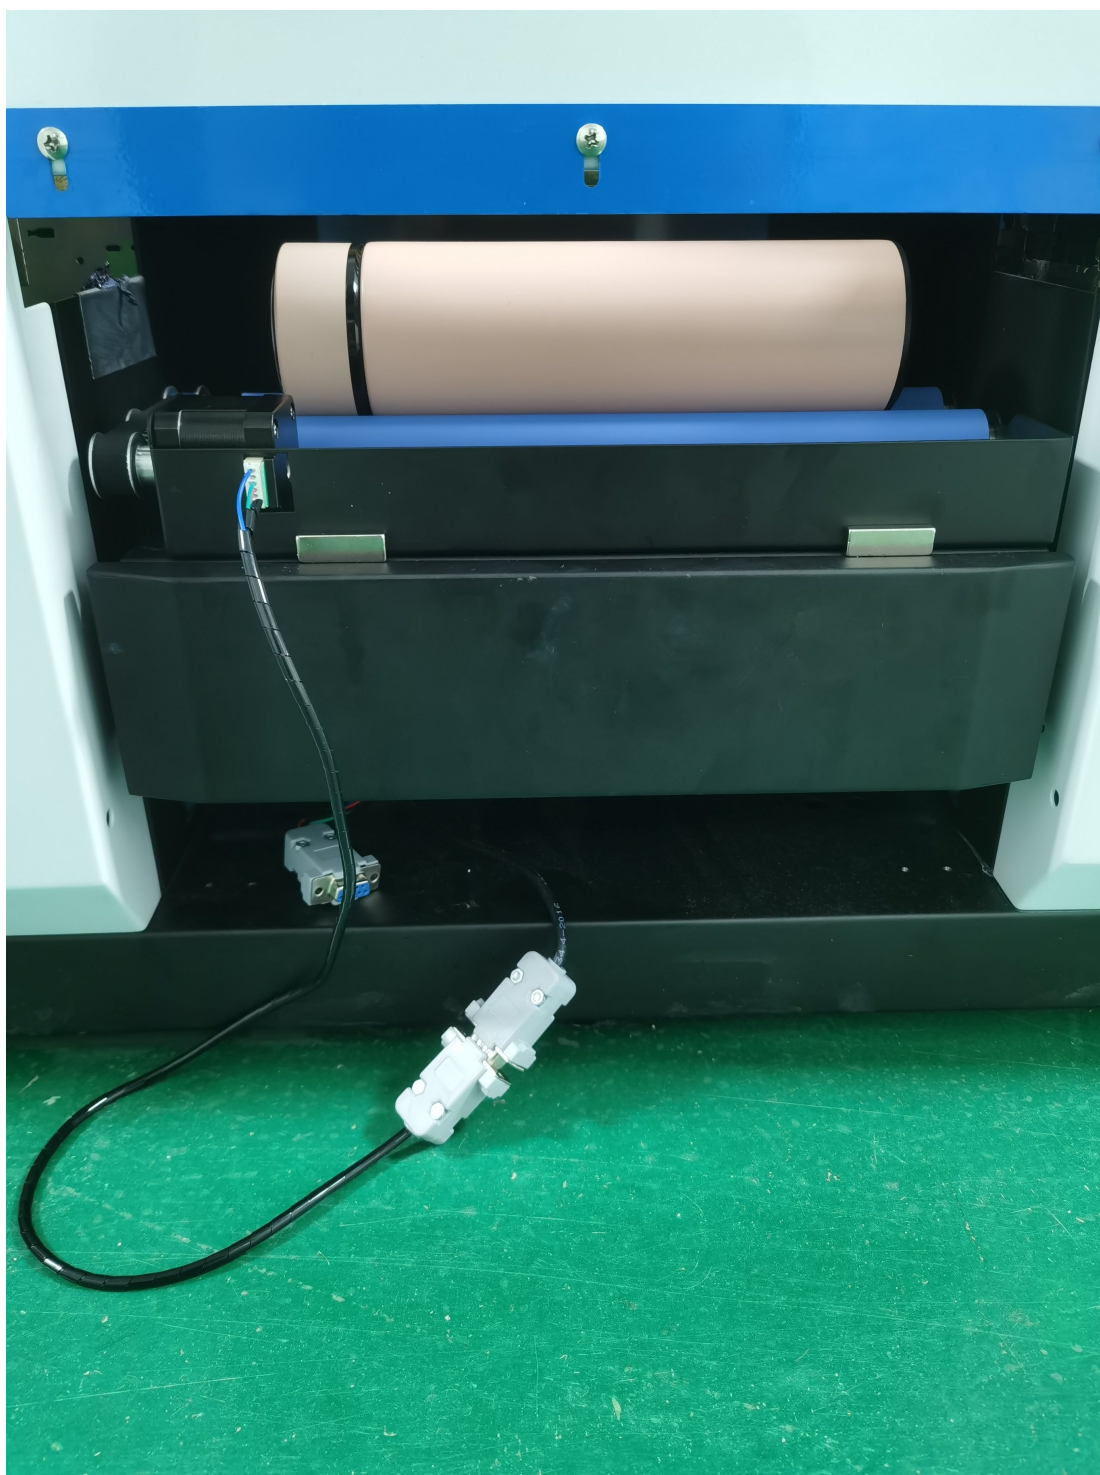


4. Turn on the "Cylinder" mode on the touch screen



5. Software setting, please make sure Y=0 (Then you can start printing)

Layout	
	
Paper Size	
Width	30.000
Height	42.000
Original Size	
Width	21.590
Height	17.272
Output Position	
X	5.000
Y	0.000
Output Size	
Width	21.590
Height	17.272
Scale	
Equal Proportion	TRUE
Copies	
Copies(White)	0
Copies(Color)	1
Repeat	
..	.